


Mounting instructions for the Hidden Brackets

ATTENTION (mind the inch!!)

When hanging the Redwell after using the center mark of the bracket template (see picture 1) the unit will hang 20 mm (approx. 1Inch) lower in it's final position (see picture 6).

For safety, after hanging, tighten the screws with the wrench supplied.

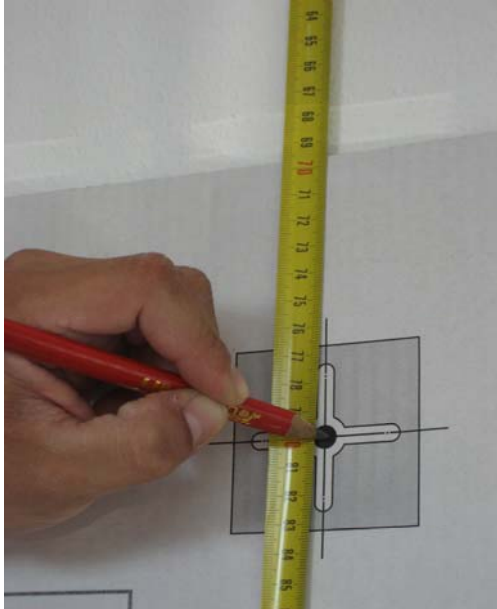


1.



2.



3.

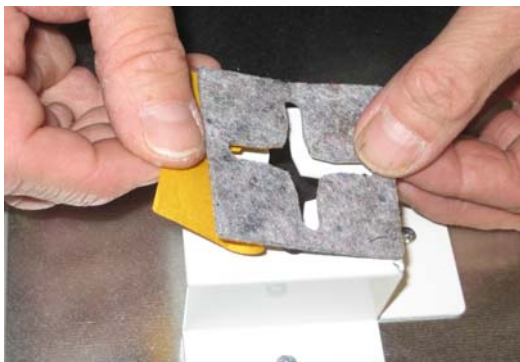


4.



5.



6

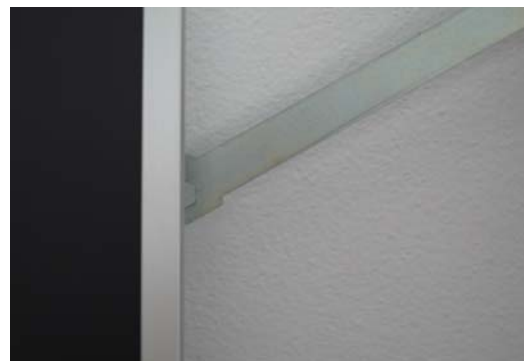

7